

# Remote Control

Model# DIAL01

## PRODUCT SPECIFICATION

1. Model : DIAL01
2. Dimensions : OD 67.6mm x H 21.2mm
3. Weight (including battery) : 74.5g ± 20g
4. Battery/Voltage : CR2032 3V x 2
5. Radio Frequency : proprietary 2.4 GHz
6. Operation Temperature :  
0°C - 50°C / 32°F - 122°F



FCC ID: Q3V-DIAL01  
IC: 28542-DIAL01

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation. Unauthorized modifications may void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.

### CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

### RED Compliance Statement

Hereby, Nien Made Enterprise Co., Ltd. declares that the radio equipment type DIAL01 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<https://www.nienmade.com/Collections.aspx>  
This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment.

### Recycling – European Directive 2012/19/EU

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### IC Information

#### Innovation, Science and Economic Development Canada (ISED) Notices

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
1. This device may not cause interference.  
2. This device must accept any interference, including interference that may cause undesired operation of the device.

#### Canada, avis d'Industry Canada (ISED)

Cet appareil contient un ou des émetteurs/récepteurs exempts de licence conformes aux RSS exempts de licence d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne doit pas causer d'interférences.
2. Cet appareil doit accepter toutes les interférences, y compris les interférences pouvant entraîner un fonctionnement indésirable de l'appareil.

#### CAN ICES-003(B) / NMB-003(B)

#### RF Exposure Warning

The equipment complies with FCC/ISED RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

## BUTTON OVERVIEW


Move Shade to Fully Open

Setup

Best Privacy

Control All Channels

Stop

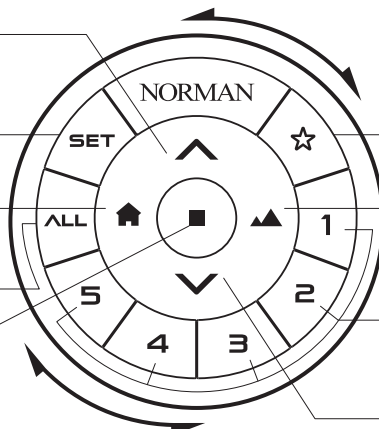

My Favorite


Best View

Shade Channel  
(There are 5 channels)

Move Shade to Fully Closed

The function of buttons may vary depending on the shade lift system, please refer to section "OPERATION".


## REPLACE BATTERY

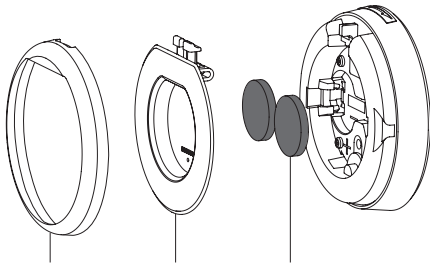

**Colour Ring**   **Battery Cover**   **CR2032 3V Batteries**

- Step 1: Remove the Colour Ring.  
Step 2: Remove the Battery Cover.  
Step 3: Replace CR2032 3V batteries.  
Step 4: Put the Battery Cover and Colour Ring back.  
Step 5: Remote lights will illuminate after proper installation.


## CHANNEL BUTTON INTRODUCTION

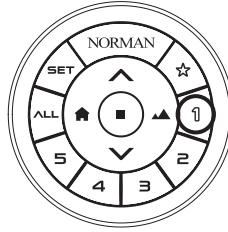

### **SELECT ONE CHANNEL**

When you select a channel (1~5), the selected channel will light up, and you can then operate the shade(s) that are programmed to this channel.

## GROUP CONTROL

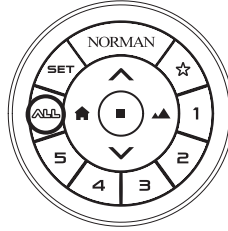


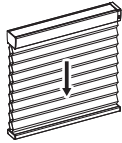
 
 

 

 

 



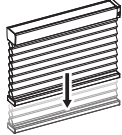
 






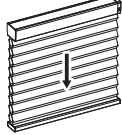
 





When pressing "ALL" button, the button will light up and you can then operate all shades that are programmed to the remote at once.

### **⚠ WARNING**

 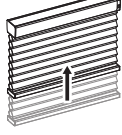- **INGESTION HAZARD: DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body



# OPERATION

Lift Feature Button Function	Bottom Up Honeycomb Shade	Top Down Bottom Up Honeycomb Shade	Day & Night Honeycomb Shade
 <b>Best Privacy</b>	 Fully close for best privacy.	 Fully close for best privacy.	 Fully close for best privacy.
 <b>Best View</b>	 Fully open for best view.	 Fully open for best view.	 Fully open for best view.
 <b>My Favorite</b>	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.	 Move to "My Favorite" pre-set position. Default "My Favorite" position: 1/2 of shade height.
 <b>Counterclockwise Dial</b>	 Slightly adjust shade position to close.	 Slightly move middle rail to close. When dial more than 90°, middle rail will continuously move to close. Middle rail will stop when it fully closed to bottom rail. Keep dialing the remote, middle rail and bottom rail will move down together.	 Slightly move middle rail to close. When dial more than 90°, middle rail will continuously move to close. Middle rail will stop when it fully closed to bottom rail. Keep dialing the remote, middle rail and bottom rail will move down together.
 <b>Clockwise Dial</b>	 Slightly adjust shade position to open.	 Slightly move middle rail to open. When dial more than 90°, middle rail will continuously move to open.	 Slightly move middle rail to open. When dial more than 90°, middle rail will continuously move to open.
 <b>Fully Close</b>	 Continuously move shade to close.	 Continuously move bottom rail to close.	 Continuously move bottom rail to close.
 <b>Fully Open</b>	 Continuously move shade to open.	 Continuously move bottom rail to open. Bottom rail will stop when it fully close to middle rail. Press this button again, bottom rail and middle rail will move up together.	 Continuously move bottom rail to open. Bottom rail will stop when it fully close to middle rail. Press this button again, bottom rail and middle rail will move up together.

---

# Catalogue

---

- PAIRING REMOTE WITH SHADE ..... 01
- CLEAR PAIRING REMOTE WITH SHADE ..... 02
- SET MY FAVORITE POSITION ..... 03
- CLEAR MY FAVORITE POSITION ..... 04
- SET UPPER LIMIT ..... 05
- CLEAR UPPER LIMIT ..... 06
- SET LOWER LIMIT ..... 07
- CLEAR LOWER LIMIT ..... 08
- COPY REMOTE ..... 09
- FACTORY RESET FOR COPY REMOTE ..... 10


---

## PAIRING REMOTE WITH SHADE

▲ Shades are pre-programmed to the designated channel / group according to your order details. If you want to change the pre-setting, please CLEAR pre-setting first (please refer to page 2) , then follow the below steps to set up a new pairing.


▲ **IMPORTANT!** Please only pair shades with the same lift type to the same channel for optimal operation.

### Step 1: On Shade

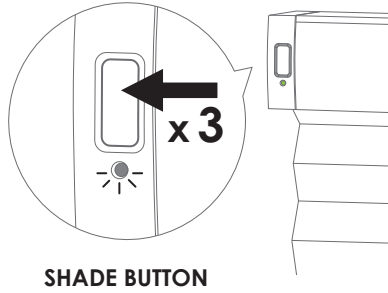


Press shade button **3 times**. The green light will start blinking, while shade is ready for pairing.

### Step 2: On Remote

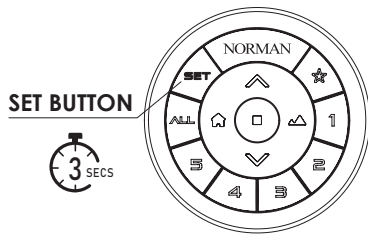


Press and hold **SET** button for **3 seconds**, and the center buttons will blink, the remote is in SETUP mode.

### Step 3: Pairing Remote with Shade

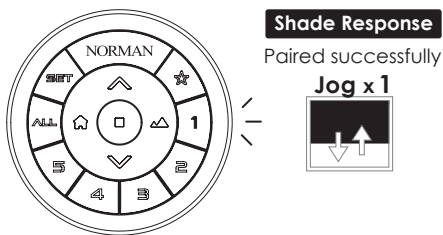

Choose a desired channel. The selected channel will light up.

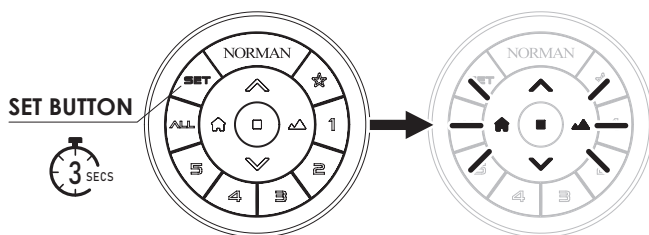


Press and hold **SET** button for **3 seconds**, and the center buttons will stop blinking. Then, the remote exits SETUP mode.

ⓘ SETUP mode will time out after 20 seconds of inactivity.


## CLEAR PAIRING REMOTE WITH SHADE

### Step 1: On Shade

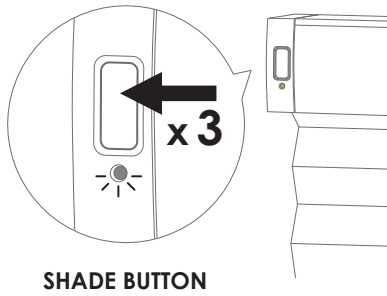


Press shade button **3 times**. The green light will start blinking, while shade is ready for pairing.

### Step 2: On Remote

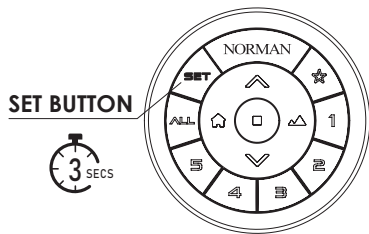


Press and hold **SET** button for **3 seconds**, and the center buttons will blink, the remote is in SETUP mode.

### Step 3: Clear remote with Shade

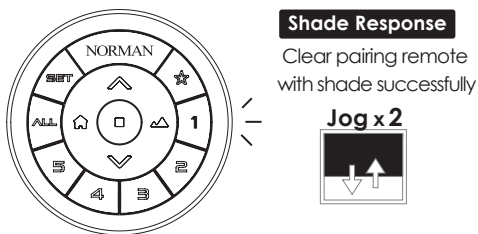

Choose the channel which belongs to the shade you would like to unpair from your remote. The selected channel will light up.

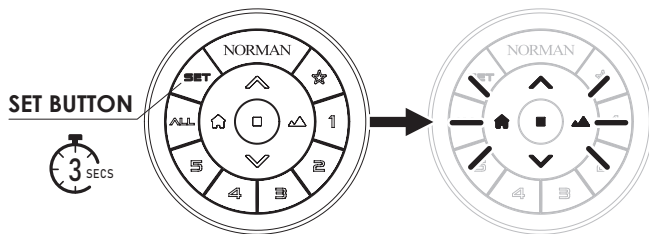

Press and hold **SET** button for **3 seconds**, and the center buttons will stop blinking. Then, the remote exits SETUP mode.


**i** SETUP mode will time out after 20 seconds of inactivity.

## SET MY FAVORITE POSITION


Please press "My Favorite"  to check the default position setting, if you would like to change My Favorite position, you could follow below procedures.

**⚠ CAUTION!** To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Move the shade to desired position.

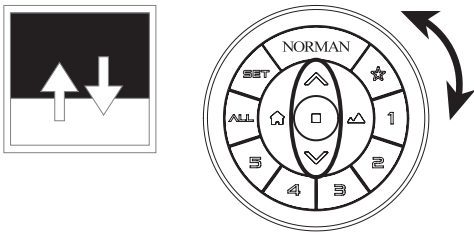


Step 2: Press and hold **SET** button for **3 seconds**, and the center buttons will blink.

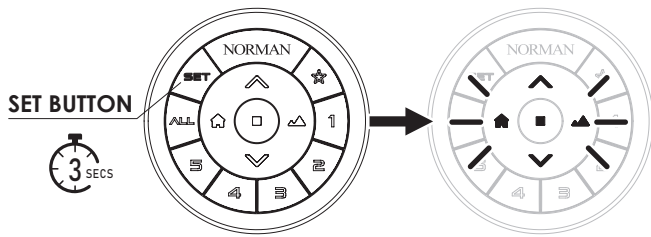

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.

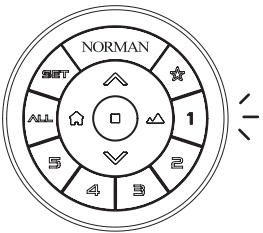

Step 4: Press  button to save My Favorite position.

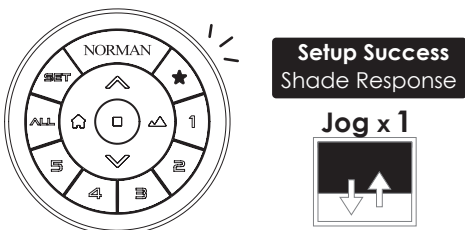


## CLEAR MY FAVORITE POSITION


▲ If you clear My Favorite position, and do not set a new one, My Favorite position will reset back to default position which is 1/2 the length of the shade.

▲ **CAUTION!** To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Press and hold **SET** button for **3 seconds**. The center buttons will blink.

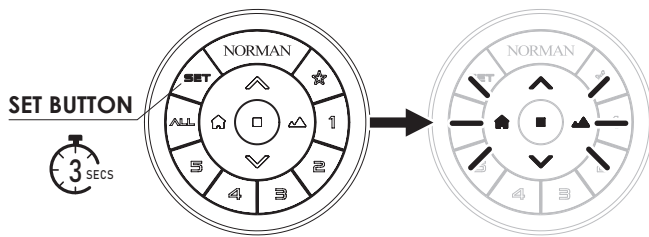

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.

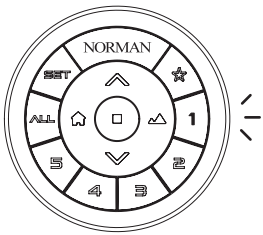

Step 3: Press and hold **★** button to clear My Favorite. The shade will jog twice and return to default Favorite position.

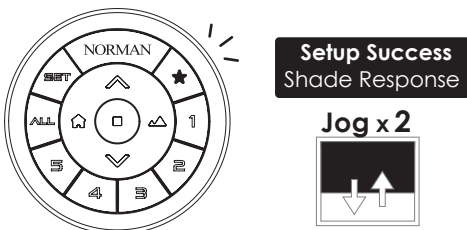




## SET UPPER LIMIT


▲ Shades upper limit has been set before shipping out from factory. If you want to change the pre-setting, please CLEAR the upper limit first (please refer to page 6) , then follow below steps to set up new upper limit.

▲ CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Move the shade bottom rail to desired position. But for Honeycomb Shade Motorised Day & Night, please always move both middle rail and bottom rail to desired position.

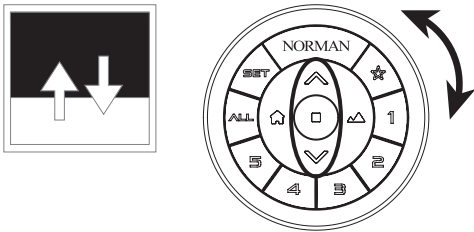


Step 2: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

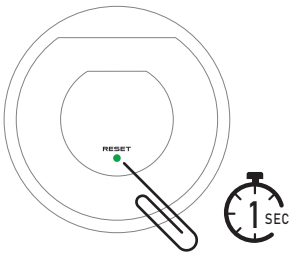

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.

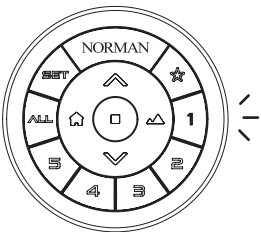

Step 4: Press  open button to save upper limit.

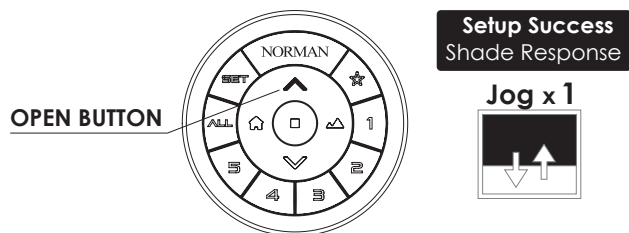


## CLEAR UPPER LIMIT


⚠ If the upper limit hasn't been set successfully, the Best View, Best Privacy, and My Favorite function can't work optimally.

⚠ **CAUTION!** To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons start blinking - the remote is now in RESET mode.

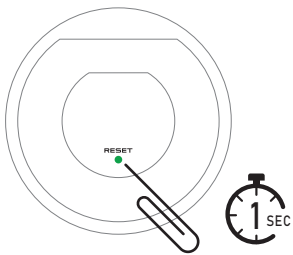

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.

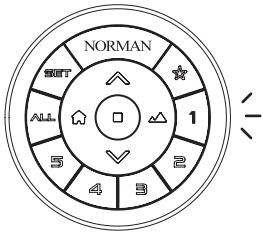

Step 3: Press and hold  open button for **1 second** to clear upper limit.

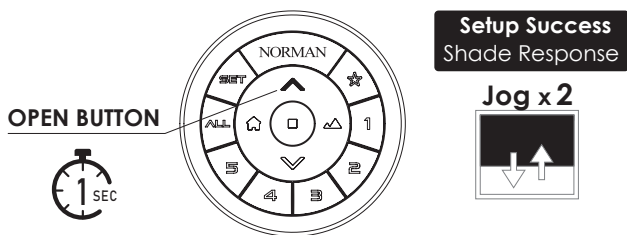


## SET LOWER LIMIT


▲ Shades lower limit has been set before shipping out from factory. If you want to change the pre-setting, please CLEAR the lower limit first (please refer to page 8) , then follow below steps to set up new lower limit.

▲ CAUTION! To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Move the shade to desired position.

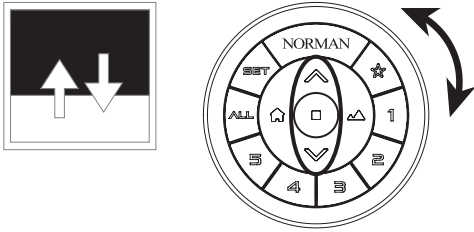


Step 2: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

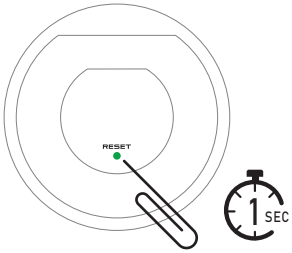

Step 3: Choose the channel which is paired to the shade. The selected channel will light up.

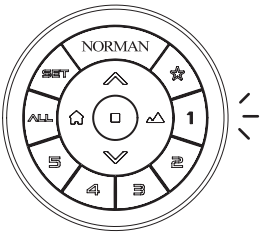

Step 4: Press  close button to save lower limit.

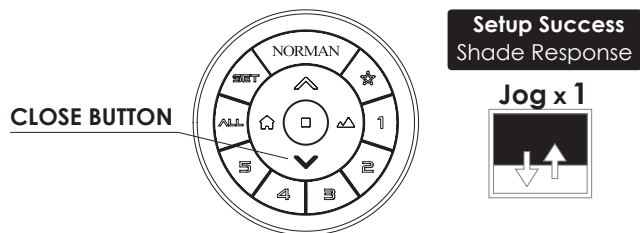


## CLEAR LOWER LIMIT


▲ If the lower limit hasn't been set successfully, the Best View, Best Privacy, and My Favorite function can't work optimally.

▲ **CAUTION!** To avoid an accidental setup with other shades: Please power off other shades first, or pair the designated shade in a separate channel. Then proceed to set up or clear your desired settings.


Step 1: Using a pin (not provided), press and hold the **RESET** button for **1 second**. The center buttons will start blinking - the remote is now in RESET mode.

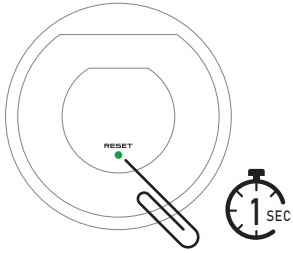

Step 2: Choose the channel which is paired to the shade. The selected channel will light up.

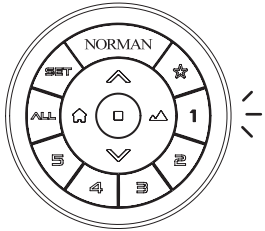

Step 3: Press and hold  close button for **1 second** to clear lower limit.

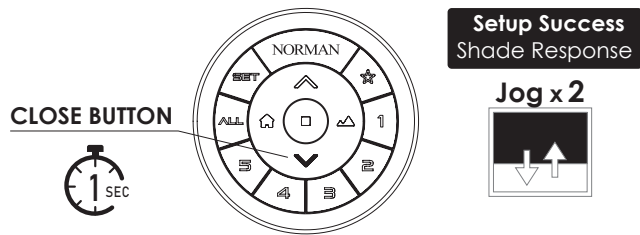


## COPY REMOTE

▲ Please always pair existing remote with ShadeAuto™ Hub (if any) first, before copy remote.

Copy all settings from the existing remote to a new remote.


### New Remote

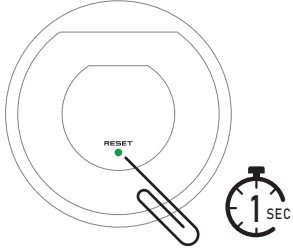

1 Press and hold **RESET** button for **1 second** by pin (not provided), the center buttons will start blinking.

2 Press **RESET** button **3 times**, the center buttons will flash quickly.

### Existing Remote

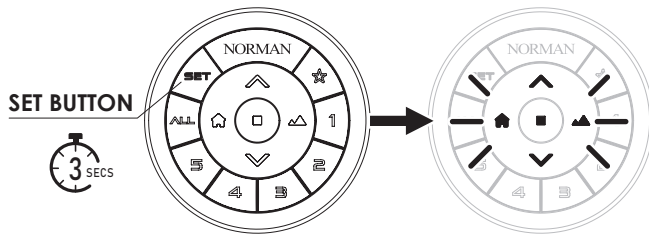

3 Press and hold **SET** button for **3 seconds**, the center buttons will start blinking.

4 Press **SET** button **3 times**, the channel lights will blink **4 times**.

Copy Success

### New Remote

All of channel lights will light up for **1 second**, and exit out of RESET mode.

### Existing Remote


Press and hold **SET** button for **3 seconds**, and the center buttons will stop blinking and exit out of SETUP mode.

---


## FACTORY RESET FOR COPY REMOTE

⚠ **CAUTION!** By performing **FACTORY RESET**, your copied remote will be erased. The connection between your existing remote and hub will be disconnected. But you can still use the existing remote to operate the paired shades.


Step 1: Press and hold **RESET** button for **1 second** by pin (not provided). The center buttons will start flashing and enter RESET mode.

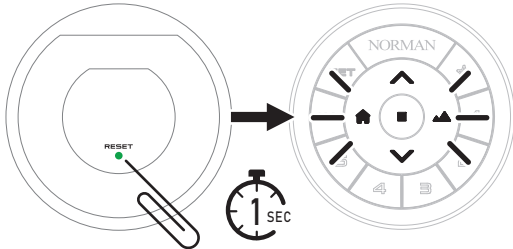

Step 2: Press **RESET** button **6 times**, the channel lights will flash **4 times**, then the center buttons will start blinking.

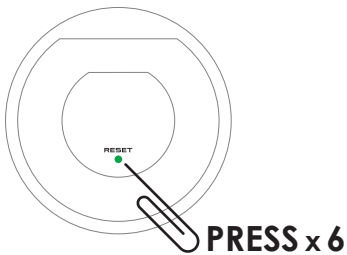

Step 3: Press and hold **RESET** button for **1 second**, and exit out of RESET mode.

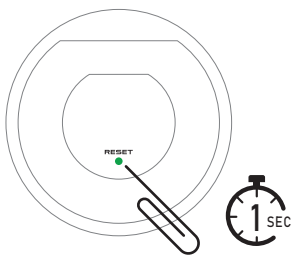

### Norman Australia

20/14 Argyle Street, Albion QLD 4010

07-3256-1068

[www.normanaustralia.com.au](http://www.normanaustralia.com.au)