


**Read the instruction before operating your shade**

**Installation & Maintenance Instructions  
Honeycomb Shade 25mm  
SmartFit™ /SmartFit™ Day&Night  
without Alum Preinstalled Top Rail**

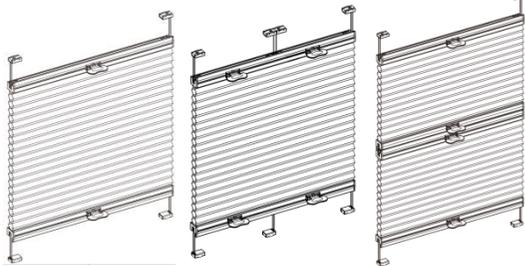

**Model A Shade** width ≤1270mm  
**Model B Shade** width >1270mm  
**SmartFit™ Day&Night**

**Getting Started**

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

**Recommended Tools**

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surfaces:


Surface	Fastener
Wood	M3.5x25mm Screws (Provided)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)

**Check Hardware**




**Step 1. Prepare the Shade for Installation**

Carefully unwind the cord in the opposite tied direction. Remove the cardboard and PE bag. The rail with magnet installed on the ends is the rail on the top.

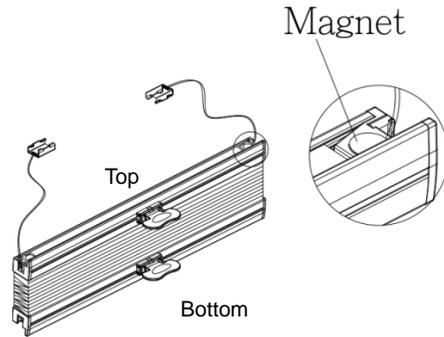


**Step 2. Shoe Base and Bracket Installation**

Place the shade in the desired position and mark the ends of the shade.

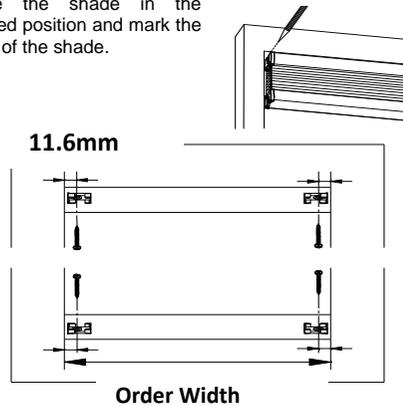

**Inside Mount**

Match the outer edge of the Shoe Base to the marked position, and allocate a minimum distance (L1) from wall to the front of Shoe Base. Install the Base with 1pc 25mm screw.

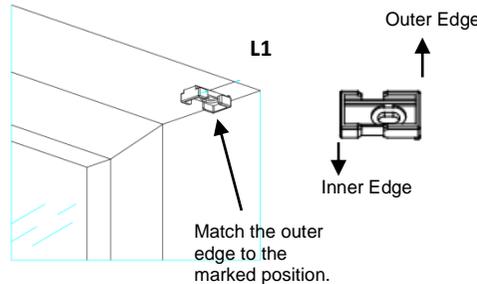

Distance	Application Condition
L1 ≥ 14mm	•With light guard front and back
L1 ≥ 10mm	•Without light guard, & with light guard at back


For shade width reaches 1270mm with center cord, after installing Shoe Bases at the ends, install two Bases in the center at top and one Base in the center at bottom, and keep them align with the end Bases. The outer edge of Bases should head to the middle line, as illustrated below. **The bottom Shoe Base needs to align with the left one at the top center.**



**Inside Mount – L bracket Installation (side mounted) for windows with marble sill (Optional)**


Allocate a distance of 16mm (L4) from bottom corner window frame and use 2pcs 38mm screws to secure the L bracket.

Use 1pc 3.6mm bolt to attach base to the L bracket (through inner screw hole).

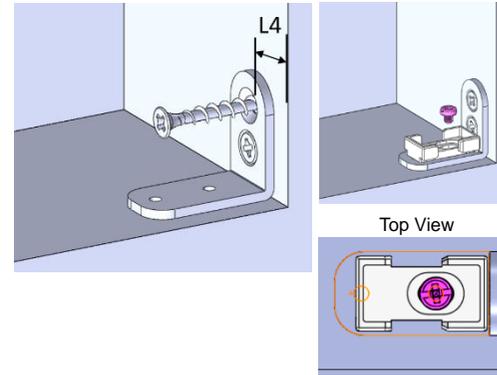

**Outside Mount**


Mark the position for L bracket. The outer screw hole of L bracket should be 8mm from the edge of the rail.

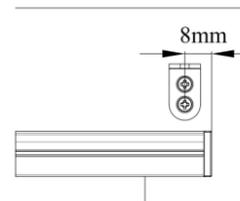

Make sure to keep minimum distance (L2) between the edge of L bracket and the top/bottom window frame ≥9mm.

Meanwhile, it is also essential to assure the distance between the top / bottom of the shade to the edge of bottom / top of the L bracket equals shade drop subtracts 23mm.

Keep L bracket parallel with the window frame and secure the L Bracket with 2pcs 38mm screws to the wall.

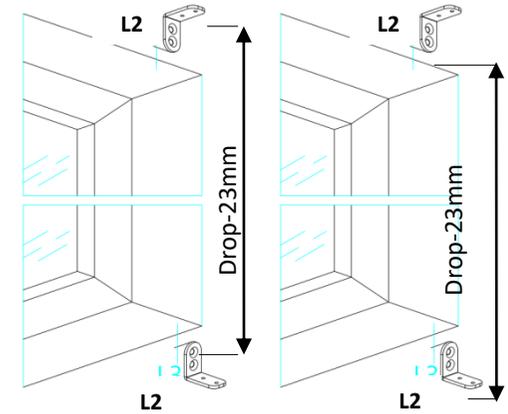


Top of the shade to the edge of bottom of the L bracket equals shade drop - 23mm  
Bottom of the shade to the edge of top of the L bracket equals shade drop - 23mm

Secure the Shoe Base onto L bracket with 1pc bolt.




For shade width reaches 1270mm with center cord, after installing L bracket at the ends, install two L brackets in the center at top and one L bracket in the center at bottom, and keep them align with the end L brackets. The outer edge of Shoe Bases should head to the middle line, and the outer edge of the left Base should align with the middle line, as illustrated below. **The bottom Shoe Base needs to align with the left one at the top center.**

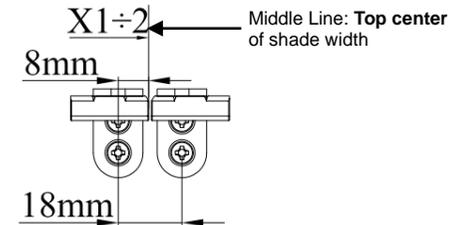


Recommendation: avoid the gypsum board surface.

**Step 3: Install Light Guard (Optional for IM)**

Please install the light guard after installation of the shade is completed.

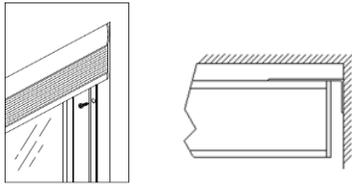


With light guard at back

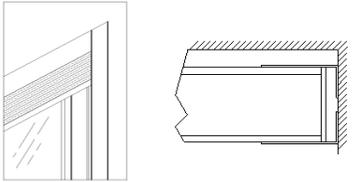


With light guard at front and back

To avoid the edges from scraping the fabric, use the protective sticker to completely cover the joint of the two pieces of light guard on both front and back sides of light guard as diagram on the right.

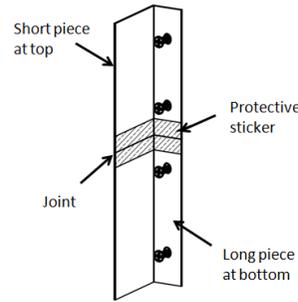


#### Step 4. Install the Shade


Install the Shoe Slider onto Shoe Base by pushing down the Slider from top of the notch then slide to the side to match the Base. Make sure that cords are nice, tight and not tangled.

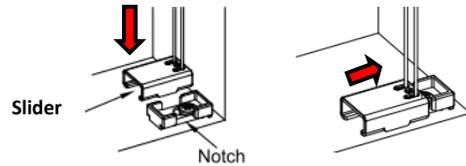


#### For SmartFit™

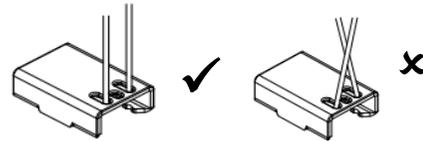

#### For SmartFit™ Day & Night

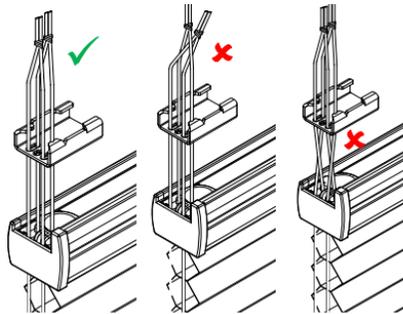



For child safety, please check and ensure that there are no loose cords after the shade is completely installed. If the shade is too loose, please retie a new knot for it. Remove bottom shoe slider, untie the knot and make a new knot for adjustment. Please do not tie the cord too tight as it will cause too much friction.

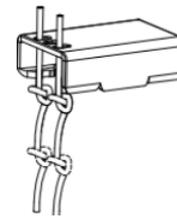

Notes: When installing the Shoe slider, it is suggested to secure the bottom shoe slider first, and then unfasten the top cord to secure the top shoe slider. Please do NOT untie the top cord until the bottom shoe slider is secured.


#### Step 5. Handle Installation

Attach the handle to the handle support pre-attached on the rail then slide against the handle support to the left until the handle can't move anymore.

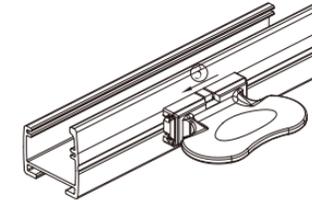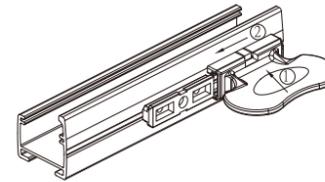

#### Step 6. Operate your Shade

Do not grasp the rail unevenly. Always lower or raise the shade in the middle or use both hands with even pressure to two handles of the rail.

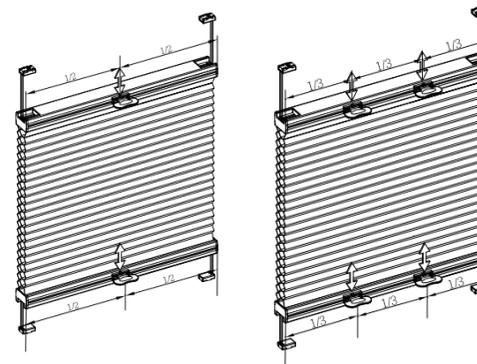


#### Step 7. Adjust the Shade

After the shade is completely installed, use the handle to raise the shade up to the top and adjust the shade to level. Then you may operate the shade to any desired position.

#### Step 8. Remove the Shade

Operate the shade to the middle from top and bottom. Remove the Shoe Slider from the Shoe Base.

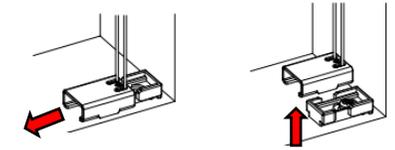

a. The light guard is to be placed at back or front of the shade at left & right side.

Place the light guard vertically towards the bottom window frame. To avoid scraping, leave a 2mm gap between fabric stack and light guard. And then mark out the location with a pencil.

Remove the double sided tapes on the narrow side of the light guard and carefully paste the light guard to the window frame in position.

b. For better fixing the light guard to the window, use 18.5mm flat head screw to secure the light guard through the pre-drilled hole.



c. When light guard length (L) > 2438mm, light guard will be sliced into 2 pieces. There are two conditions as listed below.

Light guard length (L)	Short piece Light Guard Length	Long piece Light Guard Length
2438mm < L ≤ 3048mm	610mm	L-610mm
L > 3048mm	L-2438mm	2438mm

When light guard sliced into 2pcs, firstly paste the longer piece of light guard vertically towards the bottom window frame, and paste the shorter piece of light guard above the longer one, the edges must be carefully aligned.

#### Cleaning Instructions

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).