


Read the instruction before operating your shade

Installation & Maintenance Instructions Honeycomb Shade 45mm & 62mm SmartFit™ /SmartFit™ Day & Night without Alum Preinstalled Top Rail

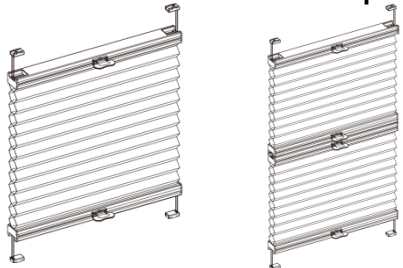

Getting Started




Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Recommended Tools


- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surfaces:


Surface	Fastener
Wood	Screws (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 

Check Hardware

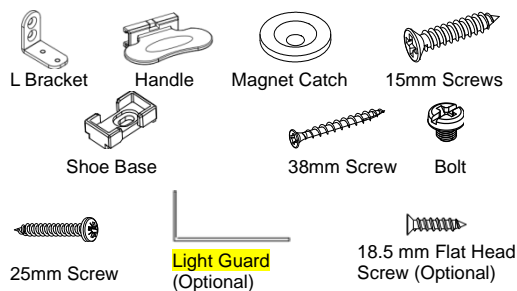

Step 1. Prepare the Shade for Installation



Carefully unwind the cord in the opposite tied direction. Remove the cardboard and PE bag. The rail with magnet installed on the ends is the rail on the top.

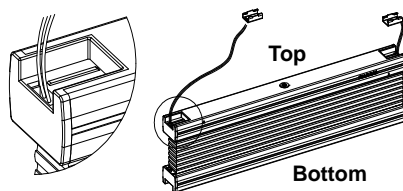




Step 2. Shoe Base & Bracket Installation

Inside Mount – Shoe Base Installation

Place the shade in the desired position and mark the ends of the shade as below.

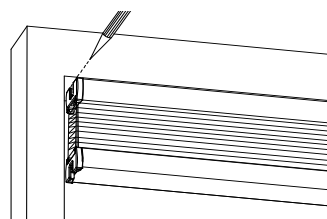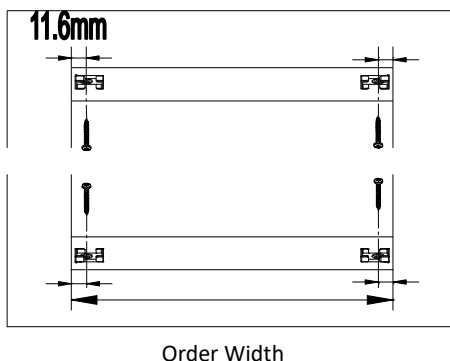

Match the outer edge of the Shoe Base to the marked position, and allocate a minimum distance (L1) from wall to the front of Shoe Base. Install the Base with 1pc 25mm screw.

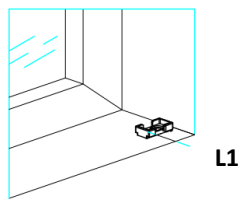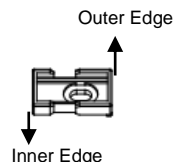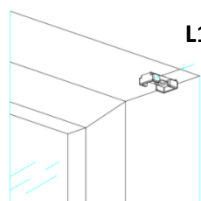

For 45mm


Distance	Application Condition
$L1 \geq 20\text{mm}$	• With light guard front and back
$L1 \geq 17\text{mm}$	• Without light guard, & with light guard at back

For 62mm

Distance	Application Condition
$L1 \geq 24\text{mm}$	• With light guard front and back
$L1 \geq 20\text{mm}$	• Without light guard, & with light guard at back

After installing Shoe Bases at the ends, install magnet catch (if there is round magnet inset in the top rail) and keep them align with the end Shoe Bases. Mark the position of magnet catch to match the round magnet inset in the top rail. Match the outer edge of the magnet catch to the marked position, and keep the screw hole at a minimum distance from the edge of the window frame. The minimum distance is 23mm for 45mmS & 45mmD, and 31mm for 62mmS & 62mmD.


Install the magnet catch with 1pc 15mm screw.

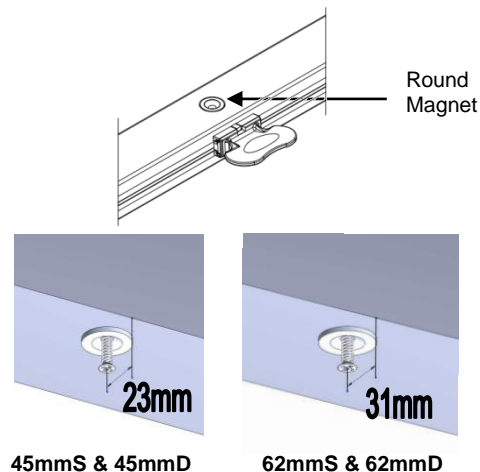

Inside Mount – L bracket Installation (side mounted) for windows with marble sill (Optional, not available for 62mm cell size)


Allocate a distance of 16mm (L4) from bottom corner window frame and use 2pcs 38mm screws to secure the L bracket.

Use 1pc 3.6mm bolt to attach base to the L bracket (through inner screw hole).

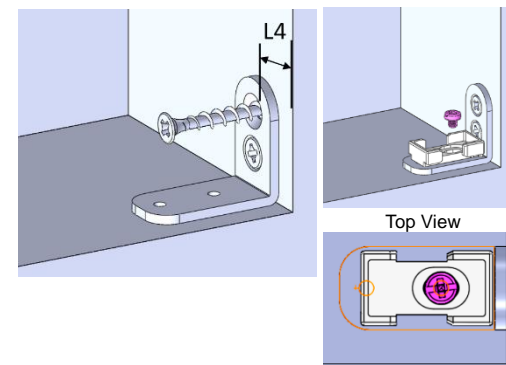

Outside Mount (Not available for 62mm cell size)


Mark the position for L bracket. The outer screw hole of L bracket should be 8.5mm from the edge of the rail.

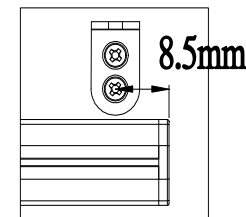

Make sure to keep minimum distance (L2) between the edge of L bracket and the top/bottom window frame $\geq 9\text{mm}$.

Meanwhile, it is also essential to assure the distance between the top / bottom of the shade to the edge of bottom / top of the L bracket equals shade drop subtracts 23mm.

Keep L bracket parallel with the window frame and secure the L Bracket with 2pcs 38mm screws to the wall.

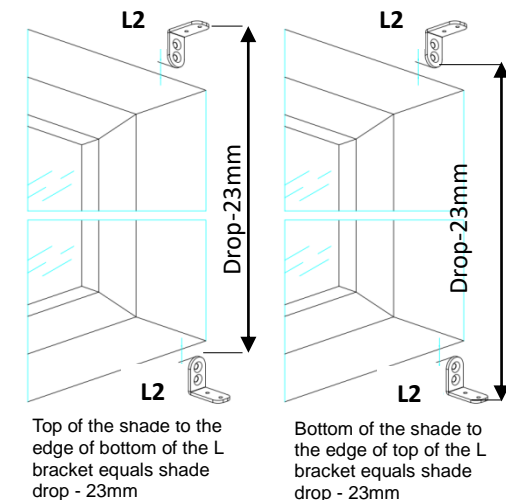

Top of the shade to the edge of bottom of the L bracket equals shade drop - 23mm

Bottom of the shade to the edge of top of the L bracket equals shade drop - 23mm


After installing L bracket at the ends, install L bracket (if there is round magnet inset in the top rail) to keep them align with the round magnet and the end L bracket. Mark the position of center L bracket to match the round magnet inset in the rail. Secure the magnet catch onto L bracket with 1pc bolt.

Recommendation: avoid the gypsum board surface.


Step 3: Install Light Guard (Optional for IM)

Please install the light guard after the installation of the shade is completed.

a. The light guard is to be placed at back or front of the shade at left & right side.

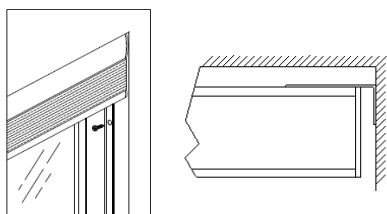

With light guard at back

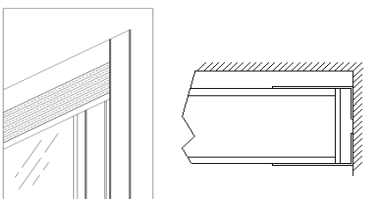

With light guard at front and back

Place the light guard vertically towards the bottom window frame. To avoid scraping, leave a 2mm gap between fabric stack and light guard. And then mark out the location with a pencil.

Remove the double sided tapes on the narrow side of the light guard and carefully paste the light guard to the window frame in position.


b. For better fixing the **light guard** to the window, use 18.5mm flat head screw to secure the light guard through the pre-drilled hole.



c. When light guard length (L) > 2438mm, light guard will be sliced into 2 pieces. There are two conditions as listed below.


Light guard length (L)	Short piece Light Guard Length	Long piece Light Guard Length
$2438\text{mm} < L \leq 3048\text{mm}$	610mm	L-610mm
$L > 3048\text{mm}$	L-2438mm	2438mm

When light guard sliced into 2pcs, firstly paste the longer piece of light guard vertically towards the bottom window frame, and paste the shorter piece of light guard above the longer one, the edges must be carefully aligned.

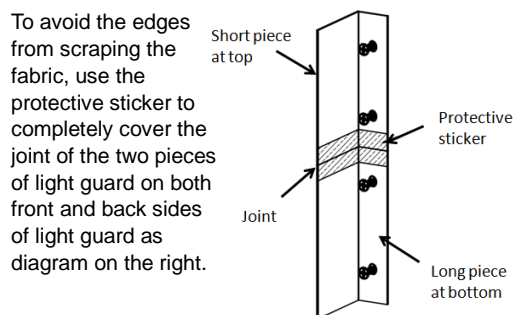


Step 4. Install the Shade


Install the Shoe Slider onto Shoe Base by pushing down the Slider from top of the notch then slide to the side to match the Base. Make sure that cords are nice, tight and not tangled.

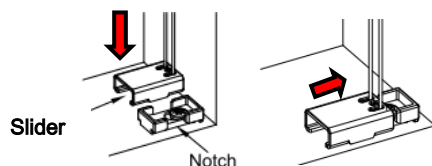

For SmartFit™

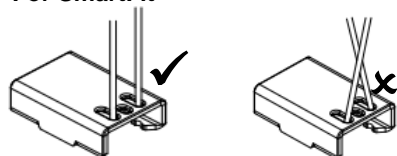


For SmartFit™ Day & Night

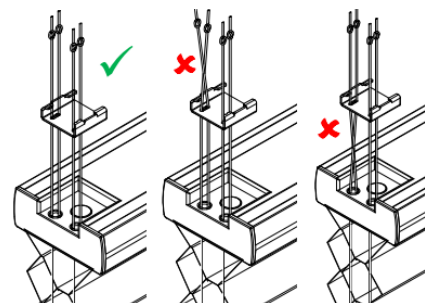

For child safety, please check and ensure that there are no loose cords after the shade is completely installed. If the shade is too loose, please retie a new knot for it.



Remove bottom shoe slider, untie the knot and make a new knot for adjustment. Please do not tie the cord too tight as it will cause too much friction.

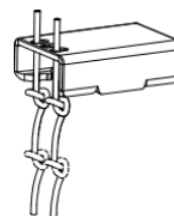

Notes: When installing the Shoe slider, it is suggested to secure the bottom shoe slider first, and then unfasten the top cord to secure the top shoe slider. Please do NOT untie the top cord until the bottom shoe slider is secured.


Step 5. Handle Installation

Attach the handle to the handle support pre-attached on the rail then slide against the handle support to the left until the handle can't move anymore.

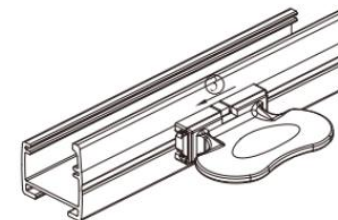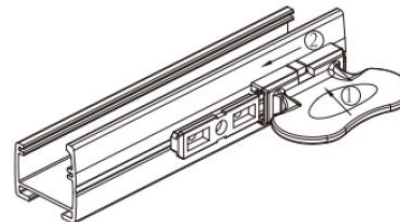

Step 6. Operate your Shade

Do not grasp the rail unevenly. Always lower or raise the shade in the middle or use both hands with even pressure to two handles of the rail.

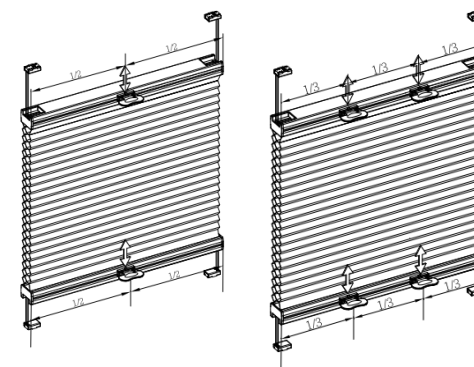


Step 7. Adjust the Shade

After the shade is completely installed, use the handle to raise the shade up to the top and adjust the shade to level. Then you may operate the shade to any desired position.

Step 8. Remove the Shade

Operate the shade to the middle from top and bottom. Remove the Shoe Slider from the Shoe Base.

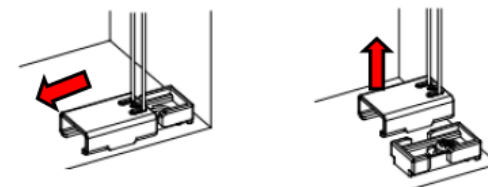

Cleaning Instructions

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).